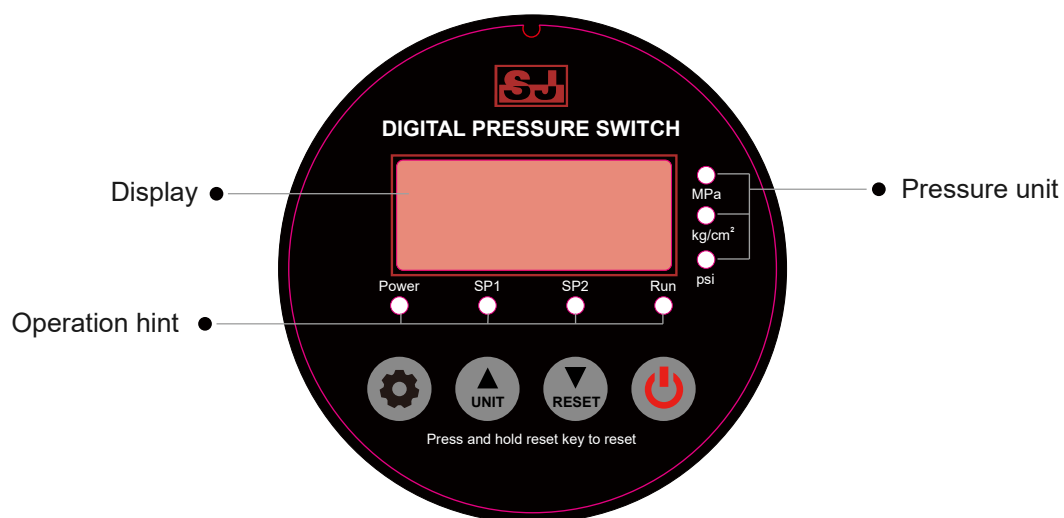


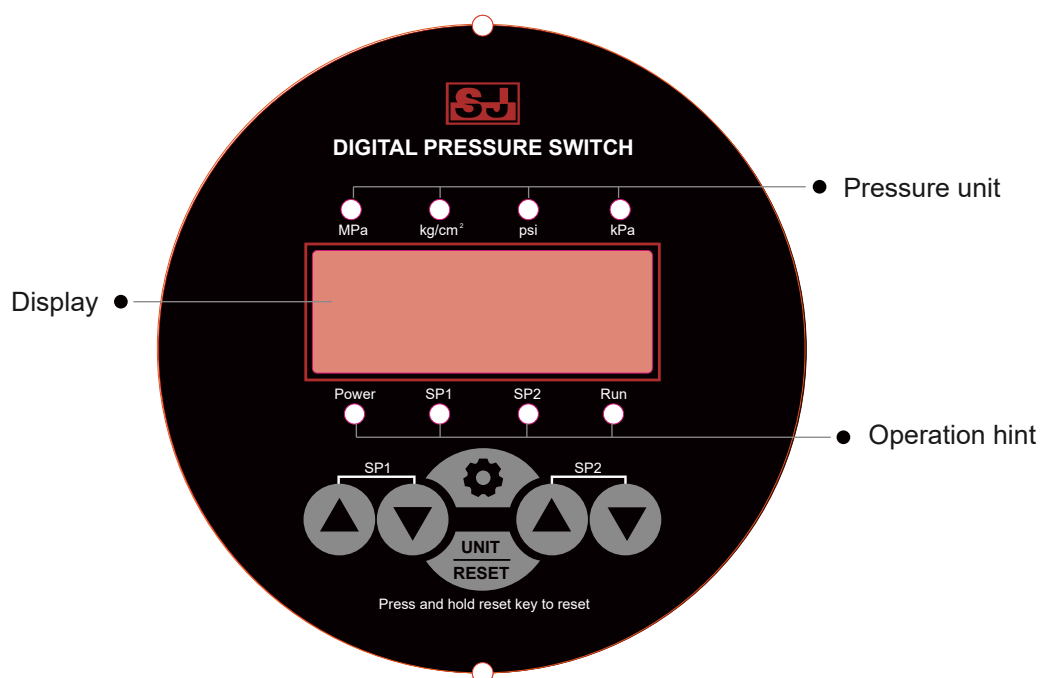


PANEL DISPLAY

3" Digital pressure switch



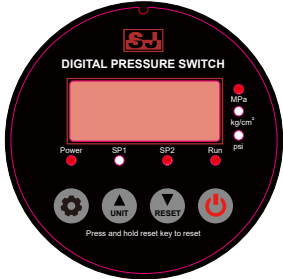
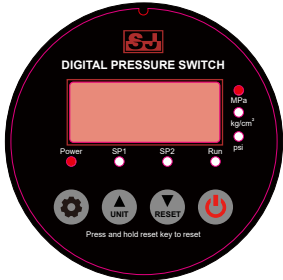
4" Digital pressure switch

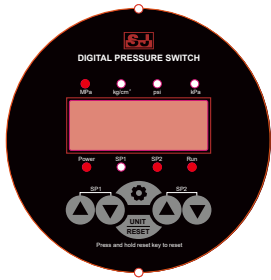
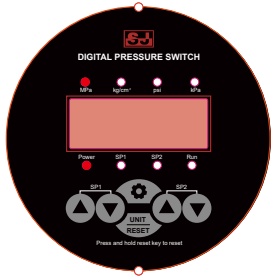




HOW TO ZEROING

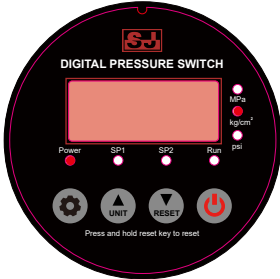
Due to the different atmospheric pressures in different places, the zero calibration should be performed first regardless of whether the screen has displayed values or not.

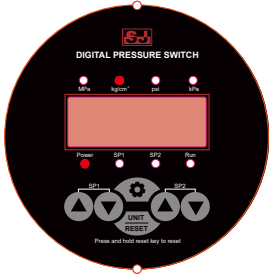
3" Digital pressure switch		
Operation	Operate	Indicator light
Step. 1 Power on	Please make sure that the pressure gauge is powered on at atmospheric pressure. At this time, the indicator light is on, and the "RUN" light is flashing.	
Step. 2 Zeroing	1. Press "  " to enter the setting menu. 2. Press and hold "RESET" (down arrow) to zero.	

4" Digital pressure switch		
Operation	Operate	Indicator light
Step. 1 Power on	Please make sure that the pressure gauge is powered on at atmospheric pressure. At this time, the indicator light is on, and the "RUN" light is flashing.	
Step. 2 Zeroing	Press and hold "UNIT/RESET" to zero.	



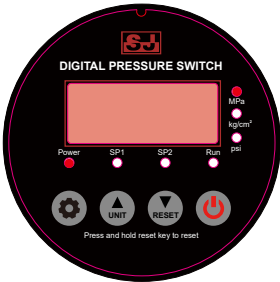
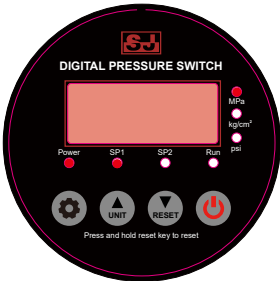
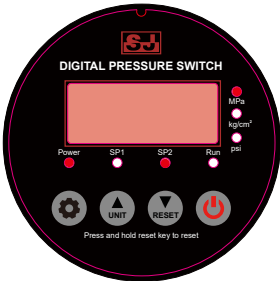
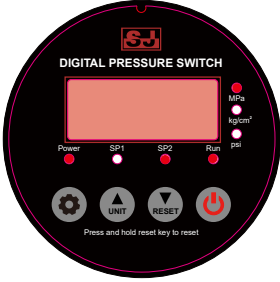
HOW TO SWITCH THE PRESSURE UNIT

3" Digital pressure switch		
Operation	Operate	Indicator light
Switch the unit	1. Press "  " to enter the setting menu. 2. Press and hold UNIT" (up arrow) to switch the unit.	

4" Digital pressure switch		
Operation	Operate	Indicator light
Switch the unit	Press "UNIT/RESET" to switch the unit.	



HOW TO SET THE UPPER AND LOWER LIMIT

3" Digital pressure switch		
Operation	Operate	Indicator light
Step. 1 Enter the menu	Press "  " to enter the setting menu.	
Step. 2 Set the upper limit	1. Press "  " key to enter the upper limit setting menu. 2. Press "UNIT" (up arrow) or "RESET" (down arrow) to increase or decrease values.	
Step. 3 Set the lower limit	1. Continue to the previous step, press "  " to enter the lower limit setting menu. 2. Press "UNIT" (up arrow) or "RESET" (down arrow) to increase or decrease values.	
Step. 4 Complete the setting	1. Press "  " to exit the limit setting. 2. Press "  " to complete the upper and lower setting.	



HOW TO SET THE UPPER AND LOWER LIMIT

4" Digital pressure switch		
Operation	Operate	Indicator light
Set the upper limit	Short press the "up arrow" or "down arrow" under "Upper limit" to increase or decrease the value to complete the upper limit setting.	
Set the lower limit	Short press the "up arrow" or "down arrow" under "Lower limit" to increase or decrease the value to complete the lower limit setting.	